


## Oppo UDP-203 Standard Installation Guide

Please be aware that use of this modification kit is entirely at your own risk! We accept no responsibility for any damage or injury resulting from the installation of this modification.

Before installation, make sure your BDP-103 player is upgraded to the latest Oppo-approved firmware ( "superdiscs" or other firmware hacks will affect the chip operation). It is recommended that you first reboot your player before performing a firmware update.

1. Turn off the player and disconnect all cables.
2. Remove all top-cover-retaining screws and open the cover.
3. Connect the 4-pin plug to the 4-pin socket on the mainboard as shown in the figure. Remove the backing and attach the kit board to the chassis with the adhesive pad. Ensure that the socket is well seated and that the cable is clear of the components on the mainboard.

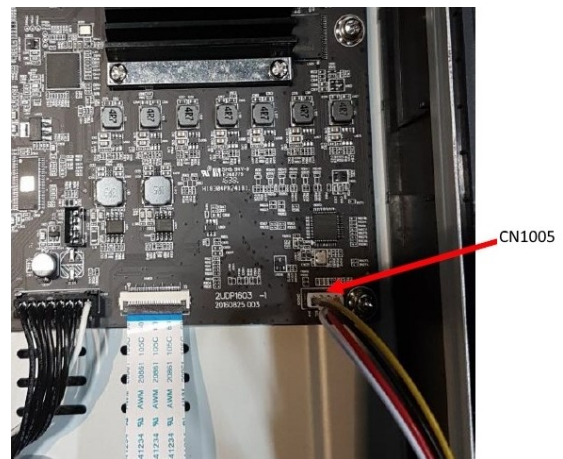

4. Refit the top cover and screws and reconnect your cables (power cable last).

**Congratulations – your modification is now complete!**

## Oppo UDP-203 Standard Region-Setting Guide

### Change of Blu-ray Regions

- (1) Start the player and do not put in any disc.
- (2) After the message “No-disc” is displayed, press the following buttons in sequence on the remote (you will see the display brightness change each time you push dimmer):

For Region A	DIMMER , DIMMER , DIMMER , MUTE , 1
For Region B	DIMMER , DIMMER , DIMMER , MUTE , 2
For Region C	DIMMER , DIMMER , DIMMER , MUTE , 3

- (3) Restart the player. The Blu-ray region setting will be effective after reboot.



### Change of DVD Regions (normally leave it set to Region 0 – Auto switching)

- (1) Start the player and do not put in any disc.
- (2) After the message “No-disc” is displayed, press the following buttons in sequence on the remote (you will see the display brightness change each time you push dimmer) :

For Region 0	DIMMER , DIMMER , DIMMER , PURE AUDIO , 0 (default setting)
For Region 1	DIMMER , DIMMER , DIMMER , PURE AUDIO , 1
For Region 2	DIMMER , DIMMER , DIMMER , PURE AUDIO , 2
For Region 3	DIMMER , DIMMER , DIMMER , PURE AUDIO , 3
For Region 4	DIMMER , DIMMER , DIMMER , PURE AUDIO , 4
For Region 5	DIMMER , DIMMER , DIMMER , PURE AUDIO , 5
For Region 6	DIMMER , DIMMER , DIMMER , PURE AUDIO , 6

- (3) Restart the player. The DVD region setting will be effective after reboot.

#### Note:

- (1) Zone/Region switching must be done within 20 seconds.
- (2) Standby Mode needs to be set to Energy Efficient
- (3) If, after inserting a disc, “resume” appears on the display, press **stop** on the remote and then press play to start the disc.